


flashflight®

LIGHT UP FLYING DISC INSTRUCTIONS

HOW TO CHOOSE YOUR COLOR WITH DISC-O SELECT™:

PRESS ON. DURING 1ST CYCLE OF COLORS, PRESS BUTTON WHEN YOUR DESIRED COLOR APPEARS. ENJOY.

BATTERY REPLACEMENT INSTRUCTIONS:

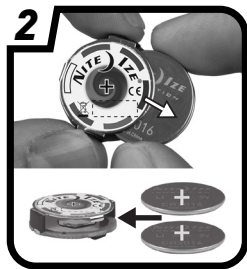

REPLACE BATTERIES:
2 X CR2016 3V



WARNING: DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. BATTERIES SHOULD BE INSERTED IN THE DIRECTION INDICATED ON THE BATTERY HOLDER. DO NOT REVERSE OR MIX THE DIRECTION OF THE BATTERIES.

⚠ WARNING

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD.

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.